

2.4 GHz WIRELESS HEADPHONES RED EDITION

IMPORTANT! FOR OPTIMAL PERFORMANCE, BE SURE THAT THE HEADPHONES' BLUE LED AND THE DETECTOR ARE ON THE SAME SIDE!

Pairing Instructions

FOR RACER 2 SYSTEM BOX SERIAL NUMBERS SMALLER THAN 9403 AND GOLD RACER SYSTEM BOX SERIAL NUMBERS SMALLER THAN 6917

1. Insert the dongle in the socket located on the left side of the system box and turn the detector on.
2. Switch the on-off button of the headphones to "on" position.
3. Headphones will emit a number of beeps to indicate the battery status as follows: Five (5) beeps for fully charged battery, four (4), three (3), two (2) beeps to indicate diminishing charge and one (1) beep if the battery is low. When the battery is approaching full depletion, the headphones will start emitting continuous beeps at short intervals indicating an immediate need to charge the battery. **IMPORTANT! Disconnection and unpairing may occur when the battery is low!**
4. The blue LED on the other side will start blinking fast.
5. Press on the button marked with a white dot on the headphones with your finger and be sure that 2 beeps are heard from the headphones. The headphones will NOT pair with the detector if 1 beep is heard.
6. For channel selection, push and hold the detector's trigger switch forward and press the down button simultaneously. Each time you press the down button, channels will change between 00-05.
7. When the pairing is successful, the audio will be heard through the headphones and the blue LED will start blinking every two seconds.
8. Once the pairing is complete, the headphones and the detector will connect automatically at the next start-up.
9. To adjust the volume, use the on-off/volume knob on the detector.

FOR RACER 2 SYSTEM BOX SERIAL NUMBERS BIGGER THAN 9402 AND GOLD RACER SYSTEM BOX SERIAL NUMBERS BIGGER THAN 6916

'An "off" position has been added to the WiFi channels of your detector (shown with "oF" on the screen). When you are not using the wireless headphones, keeping the WiFi connection of your detector off is recommended.

1. Insert the dongle in the socket located on the left side of the system box (not applicable for Racer 2 and Gold Racer versions with the WiFi module built-in) but **DO NOT TURN THE DETECTOR ON!**
2. While pressing the white button on the headphones, switch the on-off button of the headphones to "on" position and do NOT let go of the white button until the beep indicating the battery status is heard.
3. Five (5) beeps for fully charged battery, four (4), three (3), two (2) beeps to indicate diminishing charge and one (1) beep if the battery is low. When the battery is approaching full depletion, the headphones will start emitting continuous beeps at short intervals indicating an immediate need to charge the battery. **IMPORTANT! Disconnection and unpairing may occur when the battery is low!**
4. The blue LED on the other side will start blinking every 2 seconds.
5. Turn the detector on while pressing the plus (+) button and do NOT let go of the plus (+) button for approximately 5-6 seconds.
6. When the pairing is successful, the audio will be heard through the headphones and the blue LED will start to blink every second.
7. If the pairing is not successful or if you experience any distortion in the audio or interference from another detector, change the channel by pushing and holding the trigger switch forward and pressing the down button simultaneously. Each time you press the down button, channels will change between 00-09-oF.
8. Once the pairing is complete, the headphones and the detector will connect automatically at the next start-up.
9. To adjust the volume, use the on-off/volume knob on the detector.

NOTE!

- * If the connection is lost during pairing, turn off and restart the detector and the headphones and repeat the process.
- * If the disconnection continues, turn off the detector and the headphones and remove the dongle.
- * Insert the dongle again in its socket and repeat the above process.
- * Charge the battery if it is low.

2.4 GHz WIRELESS HEADPHONES RED EDITION

IMPORTANT! FOR OPTIMAL PERFORMANCE, BE SURE THAT THE HEADPHONES' BLUE LED AND THE DETECTOR ARE ON THE SAME SIDE!

Pairing Instructions

FOR IMPACT

This edition of the headphones will **ONLY** work with IMPACT Software version R2_V1.16_V1.14 or later versions. With this version, "off" position has been added to the WiFi channels of your detector (shown with "oF" on the screen). When you are not using the wireless headphones, keeping the WiFi connection of your detector off is recommended. You can download the latest software version from http://noktadetectors.com/onlineupdate_impact-metal-detector.asp

1. MAKE SURE YOUR DETECTOR IS OFF!

2. While pressing the white button on the headphones, switch the on-off button of the headphones to "on" position and do NOT let go of the white button until the beep indicating the battery status is heard.
3. Headphones will emit a number of beeps to indicate the battery status as follows: Five (5) beeps for fully charged battery, four (4), three (3), two (2) beeps to indicate diminishing charge and one (1) beep if the battery is low. When the battery is approaching full depletion, the headphones will start emitting continuous beeps at short intervals indicating an immediate need to charge the battery. **IMPORTANT! Disconnection and unpairing may occur when the battery is low!**
4. The blue LED on the other side will start blinking every 2 seconds.
5. Turn the detector on while pressing the EXPERT button and do NOT let go of the EXPERT button for approximately 5-6 seconds.
6. When the pairing is successful, the audio will be heard through the headphones and the blue LED will start to blink every second.
7. If the pairing is not successful or if you experience any distortion in the audio or interference from another detector, change the channel by pulling and holding the trigger switch and pressing the down button simultaneously. Each time you press the down button, channels will change between 00-09-oF.
8. Once the pairing is complete, the headphones and the detector will connect automatically at the next start-up.
9. To adjust the volume, use the on-off/volume knob on the detector.

NOTE!

- * If the connection is lost during pairing, turn off and restart the detector and the headphones and repeat the process.
- * Charge the battery if it is low.

Charging

1. Charge the headphones with the supplied charging adaptor ONLY.
2. Insert one end of the charging cable into the charger and the other end into the charging jack on the headphones.
3. During charging, the LED next to the charging jack will light up red.
4. Charging will last approximately 3 hours.
5. Upon completion, the red light will go off.

Technical Specifications

Frequency: 2.4 GHz
Audio Output: Mono
Battery: Li-Po
Battery Life: 14-20 hours
Charging Time: Approximately 3 hours
Transmission Range: 10 meters (33ft.)